



	REFRIGERATORS	
<p>© Electrolux Home Products S.p.A. Spares Operations Italy Corso lino Zanussi, 30 I - 33080 Porcia (PN) Fax +39 0434 394096</p> <p>S.O.I.</p> <p>Edition: 11.2006</p>	<p>Publication no. 599 38 43-56</p> <p>EN</p> <p>with electric valve and electronic ERF2000 DIGITS</p> <p>FACTORY: ZS</p>	

CONTENT

1	INTRODUCTION	3
2	REFRIGERATION CIRCUIT	5
3	ELECTRIC WIRING	6
4	COMPONENTS	8
4.1	Control panel	8
4.2	Electronic boards	9
4.2.1	ERF2000 Power board	10
4.2.2	ERF2000 DIGITS Display board	12
4.3	Cooler and freezer compartments	13
4.3.1	Temperature sensors	14
4.3.2	Door switch	14
4.4	Compressor compartment	14
4.4.1	Electric valve	15
5	MAIN FUNCTIONS	16
5.1	Normal	16
5.2	FROSTMATIC Function (rapid freezing)	17
5.3	COOLMATIC Function (rapid cooling)	17
5.4	HOLIDAY Function (valid only for the cooler)	17
5.5	Malfunctioning of cooler air temperature sensor	18
5.6	Malfunctioning of freezer temperature sensor	19
6	ALARMS	20
6.1	Freezer compartment temperature alarm	20
7	SPECIAL FUNCTIONS	21
7.1	Service Mode	21
7.1.1	Starting Service Mode	21
7.1.2	Exiting Service Mode	21
7.1.3	Functions of the Service Mode	21
7.2	DEMO MODE	23
7.2.1	Start DEMO MODE	23
7.2.2	Exit DEMO MODE	23
7.2.3	Functions of the DEMO MODE	23
8	ACCESSIBILITY	24
8.1	Control panel	24
9	DISPLAY SYMBOLS	25
9.1	Cooler compartment	25
9.2	Freezer compartment	26

1 INTRODUCTION

This manual describes the refrigerators with electric valve and ERF2000 DIGITS electronic produced in the Susegana factory called ZS.

These models feature:

- static (static freezer, static cooler)
- total built-in
- DOOR ON DOOR door system
- single-compressor
- electronic control (electronic board ERF2000)
- electric valve
- digit display

They are appliances (KBI290DVIT) with the following PNCs:

PNC	MODEL	BRAND
925701653	JKG9499	Juno-Electrolux
925701654	SC91840-5I	AEG-Electrolux
925701655	SC81840-5I	AEG-Electrolux
925701656	SC81840-5I	AEG-Electrolux
925701659	ERO2923	Electrolux
925701660	ERO2924	Electrolux
925701661	JKG9499	Juno-Electrolux
925701662	SC91840-5I	AEG-Electrolux
925701663	SC91843-5I	AEG-Electrolux
925701664	463.688-2	Privileg
925701665	ERO2923	Electrolux
925701666	ERO2923	Electrolux
925701667	DRC629JE	De Dietrich
925701668	IKE318-5-2	Küppersbusch
925701669	DRC629JE	De Dietrich
925701670	IKE318-5-2	Küppersbusch
925701671	JCG94180	Juno-Electrolux

The controls of the appliance are inserted inside the upper crosspiece.

The power control board is ERF2000.

The user interface board is ERF2000 (DIGIT display).

The appliance has a single-compressor and an electric valve is installed to simulate the operation of a two-compressor.

It is possible to switch off only the cooler compartment and let the freezer operate, but not vice versa.

The temperatures regulation is the following:

- from +8 to +2 °C for the cooler;
- from -15 to -24 °C for the freezer.

The DIGIT display enables to show the temperatures of the two compartments.

The appliance has the following functions:

- rapid freezing;
- rapid cooling;
- freezer temperature alarm,
- cooler compartment holiday.

The appliance consists of the following compartments:

- freezer;
- cooler.

The evaporating circuit consists of:


- roll bond plate evaporator (freezer);
- tube evaporator (cooler compartment).

Key:


A = control panel

B = cooler compartment

C = freezer compartment

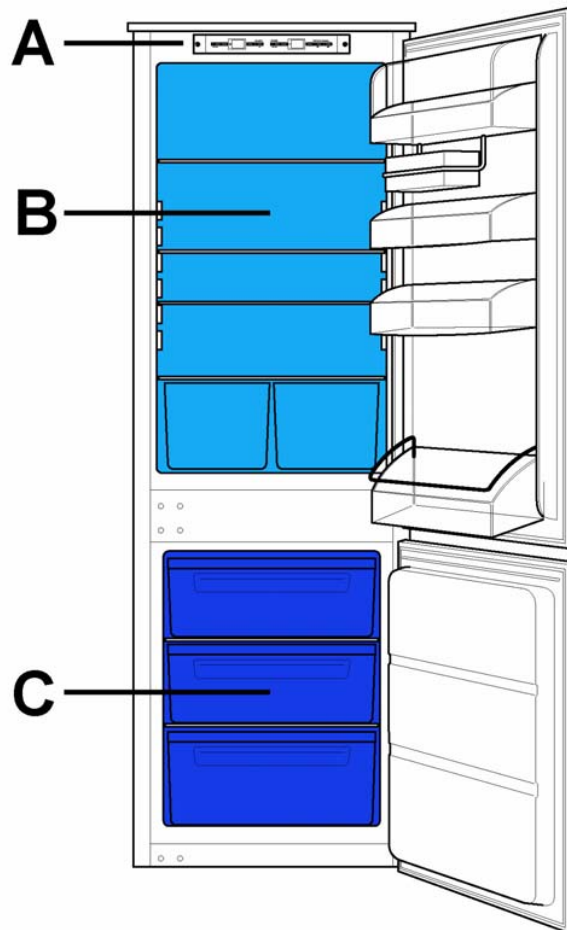

2 REFRIGERATION CIRCUIT

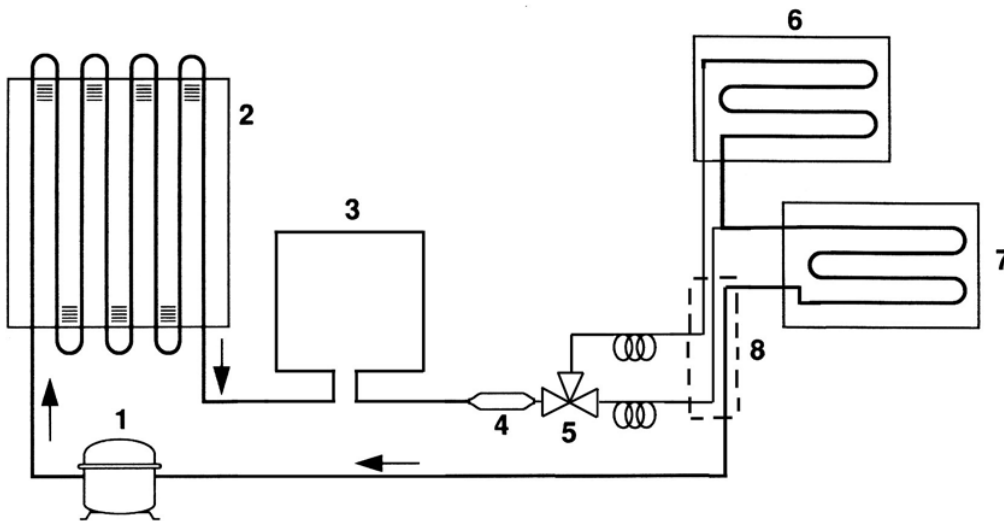

Key:


1. compressor;
2. condenser;
3. anti-condensation coil;
4. dehydrator filter;
5. electric valve;
6. tube evaporator (cooler compartment);
7. plate evaporator (freezer compartment);
8. exchanger.

The electric valve has 2 outlet capillaries to power:

- cooler + freezer
- or
- only the freezer.

3 ELECTRIC WIRING

(Check the specific diagram for each model!)

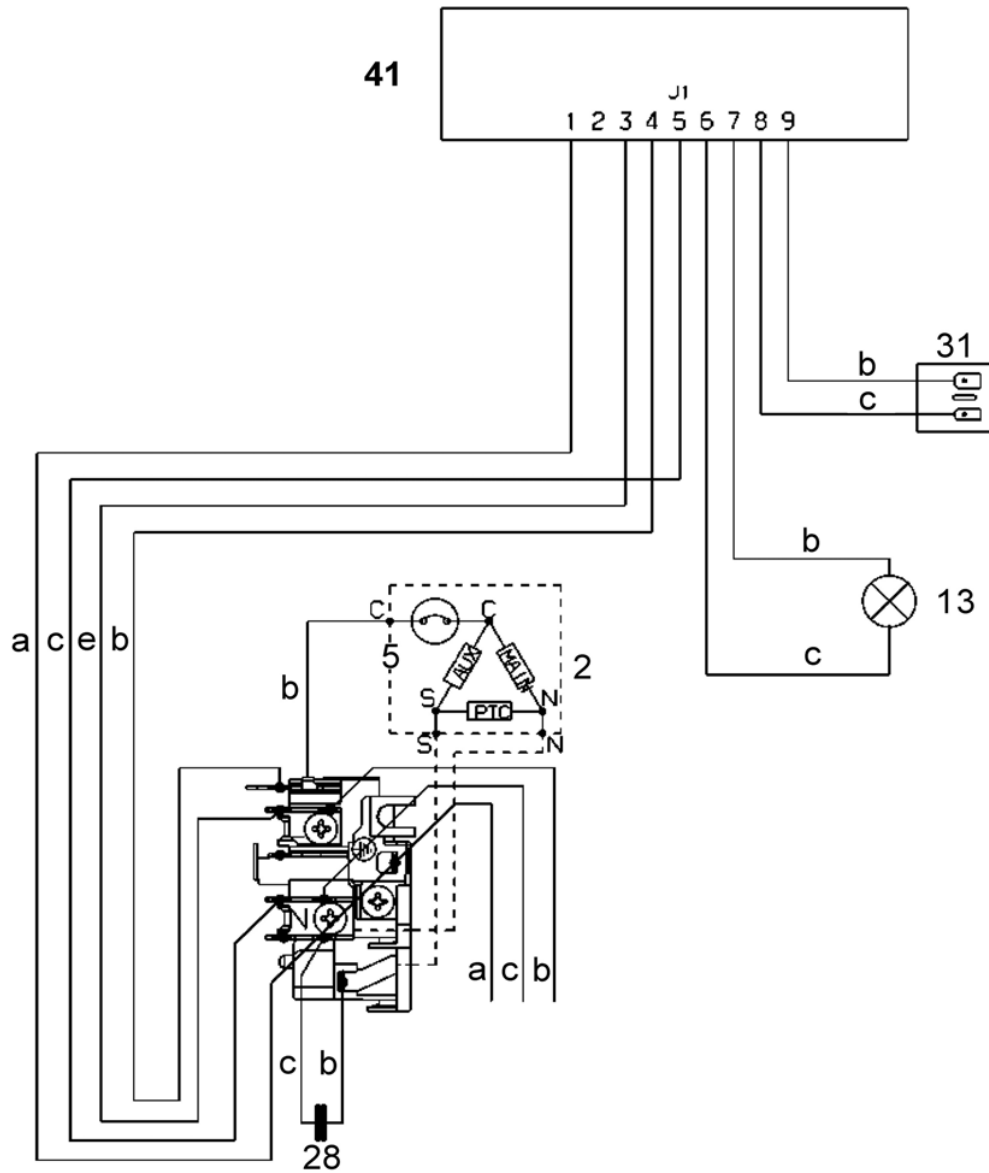


Key:

- 2. compressor
- 13. lamp
- 31. electric valve
- 28. running capacitor (if featured)
- 41. ERF2000 power board

- a. yellow-green
- b. brown
- c. blue
- d. white
- e. black

4 COMPONENTS

4.1 Control panel

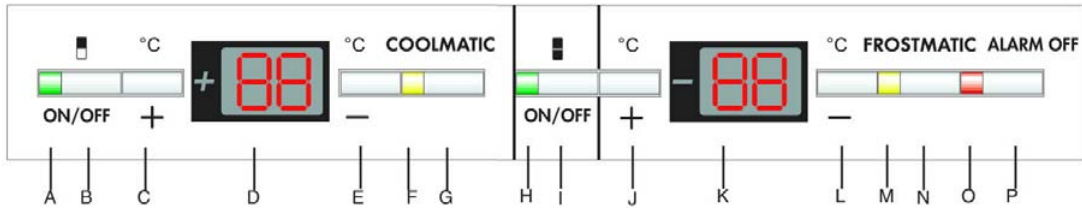

Key:

Cooler compartment

- A. cooler ON/OFF indicator LED
- B. cooler ON/OFF button
- C. cooler temperature increase button (+)
- D. cooler temperature displaying
- E. cooler temperature decrease button (-)
- F. COOLMATIC Function LED (rapid cooling)
- G. COOLMATIC function button (rapid cooling)


Freezer compartment

- H. ON/OFF indicator LED refrigeratore+freezer
- I. ON/OFF button cooler+freezer
- J. freezer temperature increase button (+)
- K. freezer temperature displaying
- L. freezer temperature decrease button (-)
- M. FROSTMATIC Function LED (rapid freezing)
- N. FROSTMATIC function button (rapid freezing)
- O. alarm pilot lamp LED
- P. alarm deactivation button

4.2 Electronic boards

The electronic board of the appliance consists of:


1. ERF2000 power board
2. ERF2000 DIGITS display board

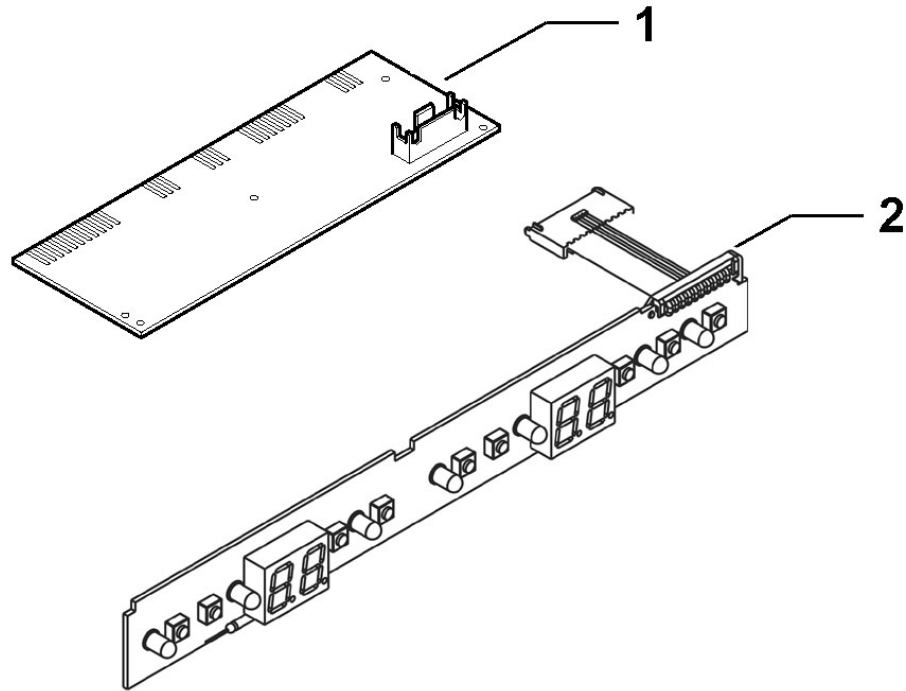


The two electronic boards are connected by means of a flat cable with a connector; therefore, the two boards are available singularly as spare part.

4.2.1 ERF2000 Power board

- View of the electronic board (side of components):

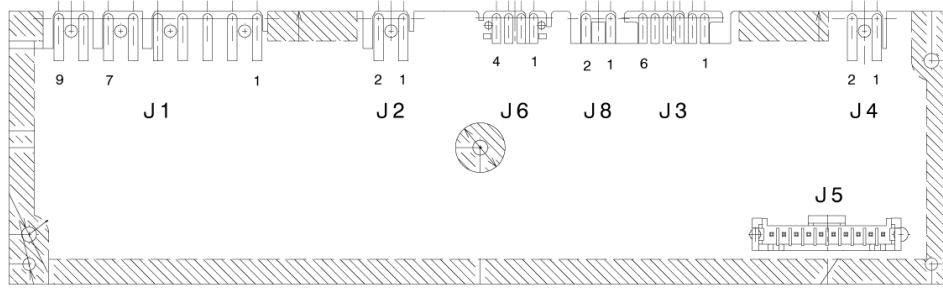

cd001168

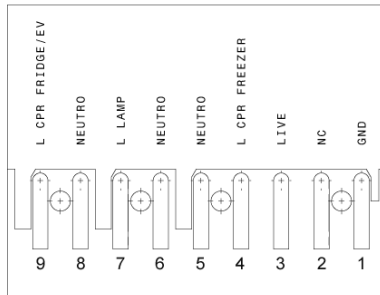

J 1

cd001172


1. earth contact
2. free
3. line
4. compressor
5. neutral
6. lamp neutral
7. lamp
8. neutral electric valve
9. electric valve



J 2

cd001173


1. free
2. free

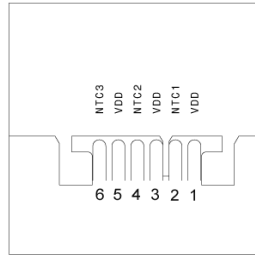

J3

cd001174

 
1. cooler air temperature sensor
2. cooler air temperature sensor
3. cooler evaporator temperature sensor
4. cooler evaporator temperature sensor
5. freezer air temperature sensor
6. freezer air temperature sensor



J4

cd001175


1. free
2. free

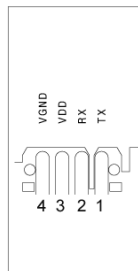

J6

cd001176

 1. free
2. free
3. free
4. free




J8

cd001177

1. free
2. free


4.2.2 ERF2000 DIGITS Display board

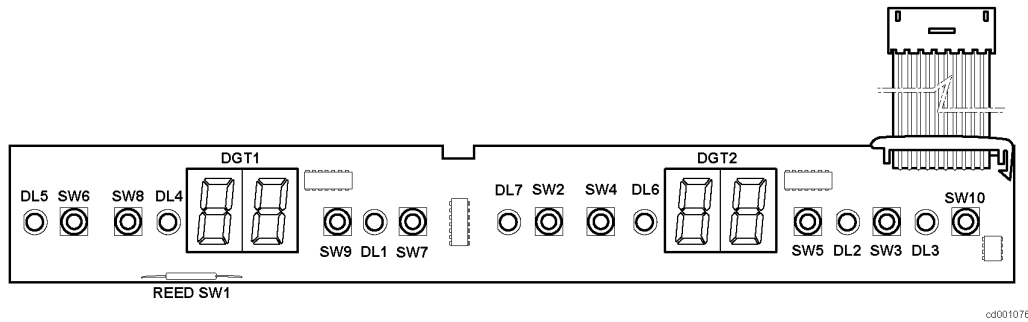

Key:

- SW1 = reed element
- SW2 = ON/OFF button cooler+freezer
- SW3 = FROSTMATIC function button (rapid freezing)
- SW4 = freezer temperature increase button (+)
- SW5 = freezer temperature decrease button (-)
- SW6 = cooler ON/OFF button
- SW7 = COOLMATIC function button (rapid cooling)
- SW8 = cooler temperature increase button (+)
- SW9 = cooler temperature decrease button (-)
- SW10 = alarm deactivation button
- DGT1 = cooler display
- DGT2 = freezer display
- DL1 = COOLMATIC function LED (rapid cooling)
- DL2 = FROSTMATIC function LED (rapid freezing)
- DL3 = alarm pilot lamp LED
- DL4 = LED sign + cooler
- DL5 = ON/OFF indicator LED cooler
- DL6 = LED sign - freezer
- DL7 = ON/OFF indicator LED cooler+freezer

4.3 Cooler and freezer compartments

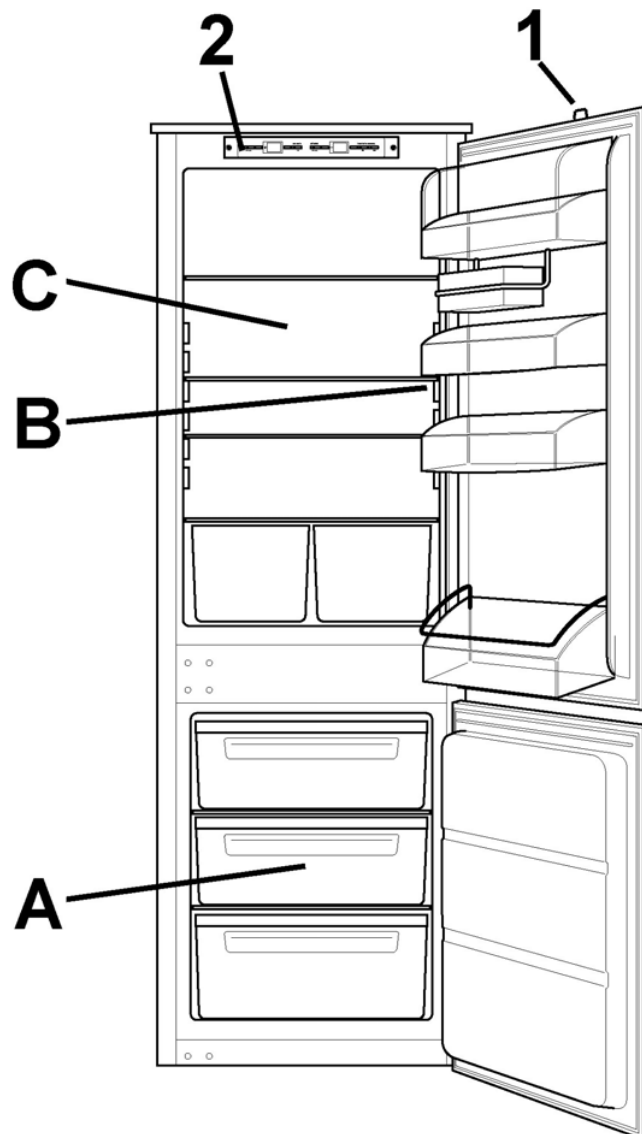

Key:

- A. freezer air temperature sensor;
- B. cooler air temperature sensor;
- C. cooler evaporator temperature sensor.
- 1. cooler door magnet;
- 2. display board reed element.

4.3.1 Temperature sensors

3 NTC sensors are used to detect the temperatures of the two compartments:

- freezer air temperature sensor A (located on the freezer cell);
- cooler air temperature sensor B (located on the cooler cell);
- cooler evaporator temperature sensor C (located on the cooler cell).

The sensors A, B and C feature the foamed cable inside the cabinet, therefore they are not replaceable (for further information, please see Service Bulletin 599374122).


4.3.2 Door switch

The control of the cooler door opening is carried out by using the magnetic switch located on the display board.

The magnetic switch is activated by a magnet located inside the cooler door.

The control does not imply the activation of the open door alarm, but it is used to light up the lamp of the cooler compartment.

4.4 Compressor compartment

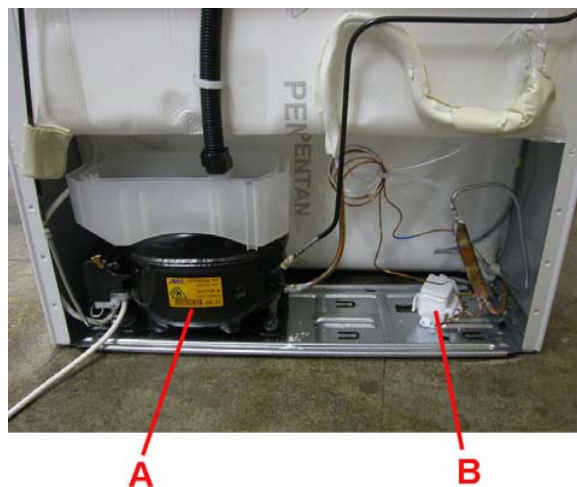

Key:

- A. compressor
- B. electric valve


4.4.1 Electric valve

The electric valve is of the 3-way bistable type.

It is supplied together with the dehydrator filter.

The connections of the electric valve are the following:

- central hose with dehydrator filter to connect the condenser;
- side hose (GS) to connect the capillary of the freezer circuit;
- side hose (KS) to connect the capillary of the cooler+freezer circuit.

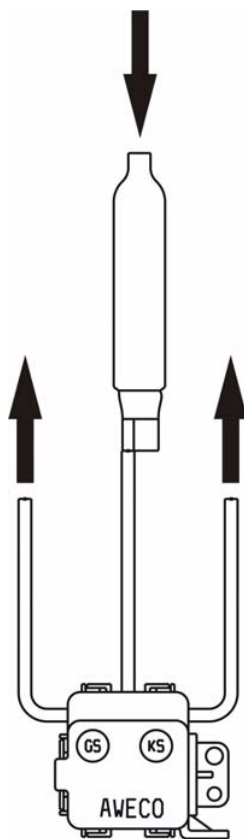


cd001644

The electric valve has the following values:

- voltage 220 V - 50 Hz
- response time <1 sec

Note:

Comply with the electric connections and do not invert the polarity (the 2 terminals FAST-ON have different dimensions).

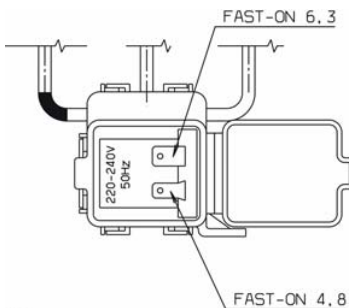

5 MAIN FUNCTIONS

5.1 Normal



Warning: Unplug the appliance before operating.

In case of first switching on with a freezer compartment temperature higher than 10 °C, the appliance operates with a test cycle (for the factory) for a maximum time of about 1,5 hours.

In this period do not perform tests for the correct operation of the appliance, since the loads of the appliance are activated only for internal check (compressor and electric valve).

When the appliance is off then:

- the compressor is off;
- the displays are off.

Pushing the ON/OFF button, the displays switch on with the following displaying:

- + symbol on cooler display;
- flashing digits of the freezer;
- freezer temperature alarm LED (buzzer active).

Push the alarm deactivation button to deactivate the buzzer.

Regulate the temperatures of the compartments so as to set the following values:

- about +5 °C in the cooler;
- about -18 °C in the freezer.

5.2 FROSTMATIC Function (rapid freezing)

The FROSTMATIC function (rapid freezing) is activated by pushing the relative button, therefore:

- The pilot lamp relative to the FROSTMATIC function lights up;
- The compressor operates in thermostatic conditions and not continuously (like the temperature knob was on max. position) for a duration of about 52 hours, and then it deactivates automatically.

To deactivate the FROSTMATIC function push the relative button.

5.3 COOLMATIC Function (rapid cooling)

The COOLMATIC function (rapid cooling) is activated by pushing the relative button, therefore:

- The pilot lamp relative to the COOLMATIC function lights up;
- The compressor operates in thermostatic conditions and not continuously (like the temperature knob was on max. position) for a duration of about 6 hours, and then it deactivates automatically.

To deactivate the COOLMATIC function push the relative button.

5.4 HOLIDAY Function (valid only for the cooler)

The HOLIDAY function is activated when the customer does not want to use temporarily the cooler.

In this case it is not necessary to leave the cooler door open, because a 15 °C temperature is automatically set to avoid the formation of bad odours inside.


To activate the HOLIDAY function push button + (temperature increase) till letter H is shown in the cooler display.

Obviously the cooler must be empty because the 15 °C temperature does not allow the preservation of the most common food.

5.5 Malfunctioning of cooler air temperature sensor

If during the normal operation a failure occurs to the cooler NTC temperature sensor (the signal coming from the sensor is out of range), then:

- The display shows cooler temperature sensor faulty.

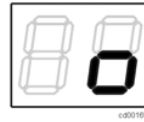


- The appliance operates with preset cycle when the compressor is powered for 40 minutes and remains off for 40 minutes alternatively.

When the sensor operates again normally, the above described conditions terminate.

Characteristics of the NTC sensor:

T (°C)	ΔT (±°C)	Rn (Ω)
10	±0.6	5337
9	±0.6	5600
8	±0.5	5877
7	±0.5	6171
6	±0.5	6481
5	±0.5	6809
4	±0.5	7156
3	±0.5	7523
2	±0.4	7911
1	±0.4	8322
0	±0.4	8758
-1	±0.4	9218
-2	±0.4	9705
-3	±0.4	10222
-4	±0.5	10770
-5	±0.5	11352
-6	±0.5	11969
-7	±0.5	12624
-8	±0.5	13320
-9	±0.5	14059
-10	±0.5	14845
-11	±0.5	15678
-12	±0.6	16564
-13	±0.6	17506
-14	±0.6	18509
-15	±0.6	19577
-16	±0.6	20715
-17	±0.6	21928
-18	±0.6	23221
-19	±0.6	24600
-20	±0.6	26072
-21	±0.7	27637
-22	±0.7	29307
-23	±0.7	31092
-24	±0.7	32999
-25	±0.7	35039
-26	±0.7	37221
-27	±0.7	39556
-28	±0.7	42056
-29	±0.8	44735
-30	±0.8	47606
-31	±0.8	50668
-32	±0.8	53952
-33	±0.8	57475
-34	±0.8	61258
-35	±0.8	65320
-36	±0.8	69686
-37	±0.8	74381
-38	±0.8	79431
-39	±0.9	84867
-40	±0.9	90721

cd001050

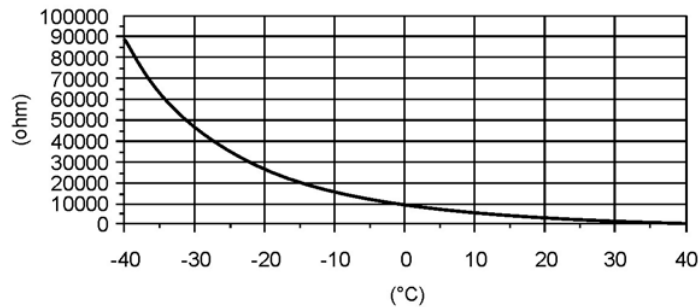


cd001199

5.6 Malfunctioning of freezer temperature sensor

If during the normal operation a failure occurs to the freezer NTC temperature sensor (the signal coming from the sensor is out of range), then:

- The display shows freezer temperature sensor faulty.

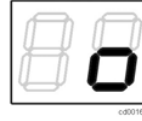


- The appliance operates with preset cycle when the compressor is powered for 40 minutes and remains off for 40 minutes alternatively.

When the sensor operates again normally, the above described conditions terminate.

Characteristics of the NTC sensor:

T (°C)	ΔT (±°C)	Rn (Ω)
10	±0.6	5337
9	±0.6	5600
8	±0.5	5877
7	±0.5	6171
6	±0.5	6481
5	±0.5	6809
4	±0.5	7156
3	±0.5	7523
2	±0.4	7911
1	±0.4	8322
0	±0.4	8758
-1	±0.4	9218
-2	±0.4	9705
-3	±0.4	10222
-4	±0.5	10770
-5	±0.5	11352
-6	±0.5	11969
-7	±0.5	12624
-8	±0.5	13320
-9	±0.5	14059
-10	±0.5	14845
-11	±0.5	15678
-12	±0.6	16564
-13	±0.6	17506
-14	±0.6	18509
-15	±0.6	19577
-16	±0.6	20715
-17	±0.6	21928
-18	±0.6	23221
-19	±0.6	24600
-20	±0.6	26072
-21	±0.7	27637
-22	±0.7	29307
-23	±0.7	31092
-24	±0.7	32999
-25	±0.7	35039
-26	±0.7	37221
-27	±0.7	39556
-28	±0.7	42056
-29	±0.8	44735
-30	±0.8	47606
-31	±0.8	50668
-32	±0.8	53952
-33	±0.8	57475
-34	±0.8	61258
-35	±0.8	65320
-36	±0.8	69686
-37	±0.8	74381
-38	±0.8	79431
-39	±0.9	84867
-40	±0.9	90721

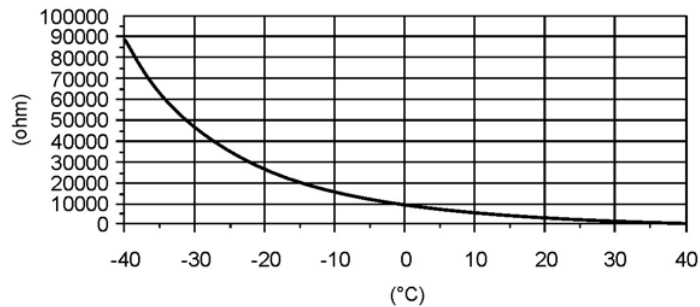

cd001199

cd001050

6 ALARMS

6.1 Freezer compartment temperature alarm

When the freezer compartment reaches $-11\text{ }^{\circ}\text{C}$, the temperature alarm activates:

- The display digits flash.
- The temperature alarm pilot lamp light up.
- The buzzer sounds.

Push the alarm deactivation button to deactivate the buzzer.

When normal conditions are reset (after a power failure):

- The acoustic signal deactivates.
- The temperature alarm pilot lamp remains on.
- The display digits still flash.

Pushing the alarm deactivation button:

- The highest temperature reached in the freezer compartment is displayed for 5 minutes.
- The alarm pilot lamp switches off.
- The display digits do not flash anymore.

7 SPECIAL FUNCTIONS

7.1 Service Mode

7.1.1 Starting Service Mode

To start the procedure, perform the following operations:

1. Connect the plug to the socket.
2. Switch on the appliance with the ON/OFF button.
3. Open the doors of the appliance.
4. Switch the appliance off with the ON/OFF button.
5. Within the first 10 seconds hold down simultaneously the two buttons "FROSTMATIC function (rapid freezing)" and "alarm deactivation".

The confirmation of the procedure start occurs with the acoustic signalling of the buzzer which emits a long beep and with the lighting up of all segments of the display.

7.1.2 Exiting Service Mode

The procedure terminates when one of the following operations is carried out:

- a. The plug is detached from the socket and reconnected.
- b. 40 minutes have elapsed and no button has been pushed.
- c. The last phase of the procedure has been reached.

7.1.3 Functions of the Service Mode

Press the button "FROSTMATIC function (rapid freezing)" or "alarm deactivation" to skip to the following phase of the procedure.

Press the "ON/OFF" button to activate/deactivate the loads (compressor, defrosting heater, lamp, fan and air flow regulator damper).

List of the phases of the SERVICE MODE:

1. All segments of the display are on.
2. All segments of the displays are off.
3. The number 0 is shown on the display and the load controlled by ACS TH1 [compressor] is checked.
To activate/deactivate the load press the button "ON/OFF" (the load is activated when the rapid freezing FROSTMATIC function pilot lamp and the alarm pilot lamp light up).
4. The number 1 is shown on the display and the load controlled by ACS TH2 [electric valve] is checked.
To activate/deactivate the load press the button "ON/OFF" (the electric valve switches from one side to the other and it is possible to hear a click).
5. The number 2 is shown on the display and the load controlled by ACS TH3 [lamp] is checked.
To activate/deactivate the load press the button "ON/OFF" (the load is activated when the rapid freezing FROSTMATIC function pilot lamp and the alarm pilot lamp light up).
6. The number 3 is shown on the display and the load controlled by ACS TH4 [not used in this appliance] is checked.
To activate/deactivate the load press the button "ON/OFF" (the load is activated when the rapid freezing FROSTMATIC function pilot lamp and the alarm pilot lamp light up).

Note:

When the procedure skips to the following phase pressing the button "FROSTMATIC function (rapid freezing)" or "alarm deactivation", the load keeps its status (for example, if the compressor had been activated, it will remain on also in the subsequent phases); in this way it is possible to check the loads simultaneously.

7. Check of the doors.

The display digits correspond to the doors: the unit digits correspond to the cooler door, while the ten digits correspond to the freezer door.

If the relative door is closed, the displayed digit is 0 otherwise is 1.

8. Check of the counter.
The display shows an increasing number at intervals of 1 second.
This is a counter used by the board for its internal management.
9. Check of the temperature sensors.
The display shows one of the following codes:

Code	DESCRIPTION
E0	No error
E1	Evaporator sensor damaged
E2	Room temperature sensor damaged (installed on the display board)
E4	Room temperature sensor damaged (installed on the power board)
E5	0 degree compartment sensor damaged

Note:

The errors regarding the cooler and freezer air sensors are already displayed during the normal operation.

At this point all the phases necessary to check the loads have been displayed, therefore it is advisable to interrupt the procedure of the SERVICE MODE unplugging and replugging the appliance.

Note:

If you do not want to interrupt the SERVICE MODE, the procedure continues with some phases dedicated exclusively to the factory, therefore they must not be considered.

Also in this case the exit from the SERVICE MODE is carried out unplugging and replugging the appliance.

7.2 DEMO MODE

The DEMO MODE function is intended only for the commercial activity and not for the user.

The internal temperature of the appliance, measured by the air sensors, must be higher than +10 °C so as the function can be activated.

7.2.1 Start DEMO MODE

To start the procedure, hold down the ON/OFF button cooler+freezer and the freezer temperature decrease button for more than 5 seconds.

The display digits flash every about 4 seconds.

7.2.2 Exit DEMO MODE

To exit the procedure, hold down the ON/OFF button cooler+freezer and the freezer temperature decrease button for more than 5 seconds or unplug the appliance.

7.2.3 Functions of the DEMO MODE

The procedure is used only for show in the selling points and allows selecting the temperatures without activating the loads (compressor and electric valve).

The displays show:

- + 5 °C for the cooler compartment (flashing display);
- -18 °C for the freezer compartment (flashing display).

By pushing the temperature regulation buttons, the displays show the temperatures that can be set (flashing display).

The internal light switches on when the cooler door is opened.

By pushing the cooler ON/OFF button it is possible to simulate the switching off of the cooler compartment (the lamp is off).

8 ACCESSIBILITY



Warning: Disconnect the appliance from the electric power before operating with the appliance.

8.1 Control panel

To access the control panel and its components (power and display boards) perform the following operations in sequence:

- a. Open the cooler door.




b) View of the control panel of the upper cross-piece.



c) Remove the programme plate removing the 2 screw covers and the 2 fixing screws.





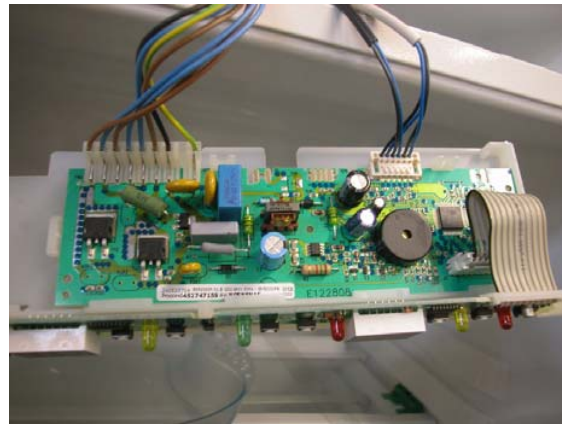



d) Remove the transparent foil and extract the control support.








e) View of the power board.

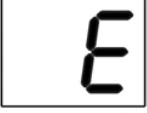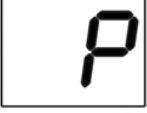9 DISPLAY SYMBOLS

9.1 Cooler compartment

DISPLAY	DIGITS	DESCRIPTION
 <small>cd001650</small>	NOT FLASHING	It indicates the cooler temperature with normal function [from +2 to +8].
 <small>cd001650</small>	FLASHING	It indicates the cooler temperature with DEMO MODE function [from +2 to +8].
 <small>cd001654</small>	NOT FLASHING	It indicates the HOLIDAY function of the cooler compartment [15 °C].
 <small>cd001651</small>	NOT FLASHING	It indicates the malfunctioning of cooler air temperature sensor.
 <small>cd001652</small>	NOT FLASHING	It indicates incompatibility between the electronic boards. Remedy: check the spare part nos. of the electronic boards.
 <small>cd001653</small>	NOT FLASHING	It indicates Eeprom parameter writing/reading error. Remedy: replace both electronic boards (power and display).

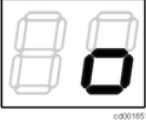9.2 Freezer compartment

DISPLAY	DIGITS	DESCRIPTION
 <small>cd001850</small>	NOT FLASHING	It indicates the freezer temperature with normal function [from -15 to -24].
 <small>cd001850</small>	FLASHING	It indicates the freezer temperature with DEMO MODE function [from -15 to -24].
 <small>cd001851</small>	NOT FLASHING	It indicates the malfunctioning of freezer air temperature sensor.
 <small>cd001852</small>	NOT FLASHING	It indicates incompatibility between the electronic boards. Remedy: check the spare part nos. of the electronic boards.
 <small>cd001853</small>	NOT FLASHING	It indicates Eeprom parameter writing/reading error. Remedy: replace both electronic boards (power and display).